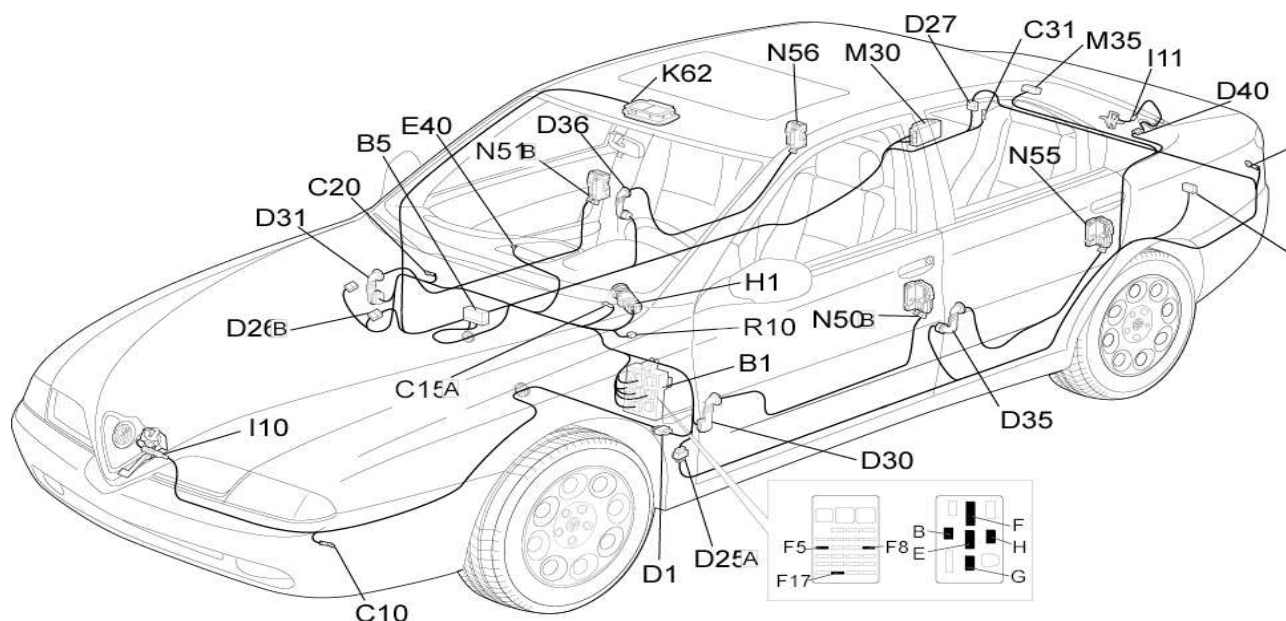


166 ALARM - Location of components E7015

[ALARM - Description](#)[ALARM - Wiring diagram](#)**[ALARM - Location of components](#)**[ALARM - Functional description](#)[Packet print](#)**Location of components**[Full-size](#)**Components**

Component code	Name	Assembly reference
B1	Junction unit	5505A
B2	Junction unit	5505A
B5	MAXI FUSE box	-
B45	Luggage compartment junction unit (CVB)	-
B99	Battery fuses junction unit (CBA)	5530B
C10	Front left earth	-
C15	Facia earth, driver's side	-
C20	Passenger side dashboard earth	-
C25	Earth on steering column	-
C30	Rear left earth	-

C31	Rear right earth	-
D1	Front-dashboard coupling	-
D20	Dashboard-rear coupling	-
D25	Dashboard-left rear coupling	-
D25	Dashboard-rear coupling left	-
D26	Dashboard-right rear coupling	-
D27	Left rear-right rear coupling	-
D30	Driver's front door rear. section.	-
D30	Front left door connection	-
D31	Front left door connection	-
D31	Front right door connection	-
D31	Passenger front door rear. section.	-
D35	Rear left door connection	-
D36	Rear right door connection	-
D40	Boot rear connection	-
E40	Alarm LED	5580E
H1	Ignition switch	5520A
I10	Bonnet opening switch	5580E
I11	Boot opening switch	5580E
J43	Direction indicators-hazard warning lights relay	-
K62	Alarm volumetric sensors assembly	5580E
M30	Alarm control unit	5580E
M35	Alarm remote control receiver	5580E
N50	Left front door lock geared motor	-
N51	Right front door lock geared motor	5540B
N55	Left rear door lock geared motor	-
N55	Left rear door lock geared motor	5540B
N56	Right rear door lock geared motor	-
N56	Right rear door lock geared motor	7005N
R10	Multiple tester connection	-